


PM-250-ADA—PM-500-ADA—PM-600-ADA—PM-750-ADA
WALL MOUNT COLD WATER SHOWER UNITS

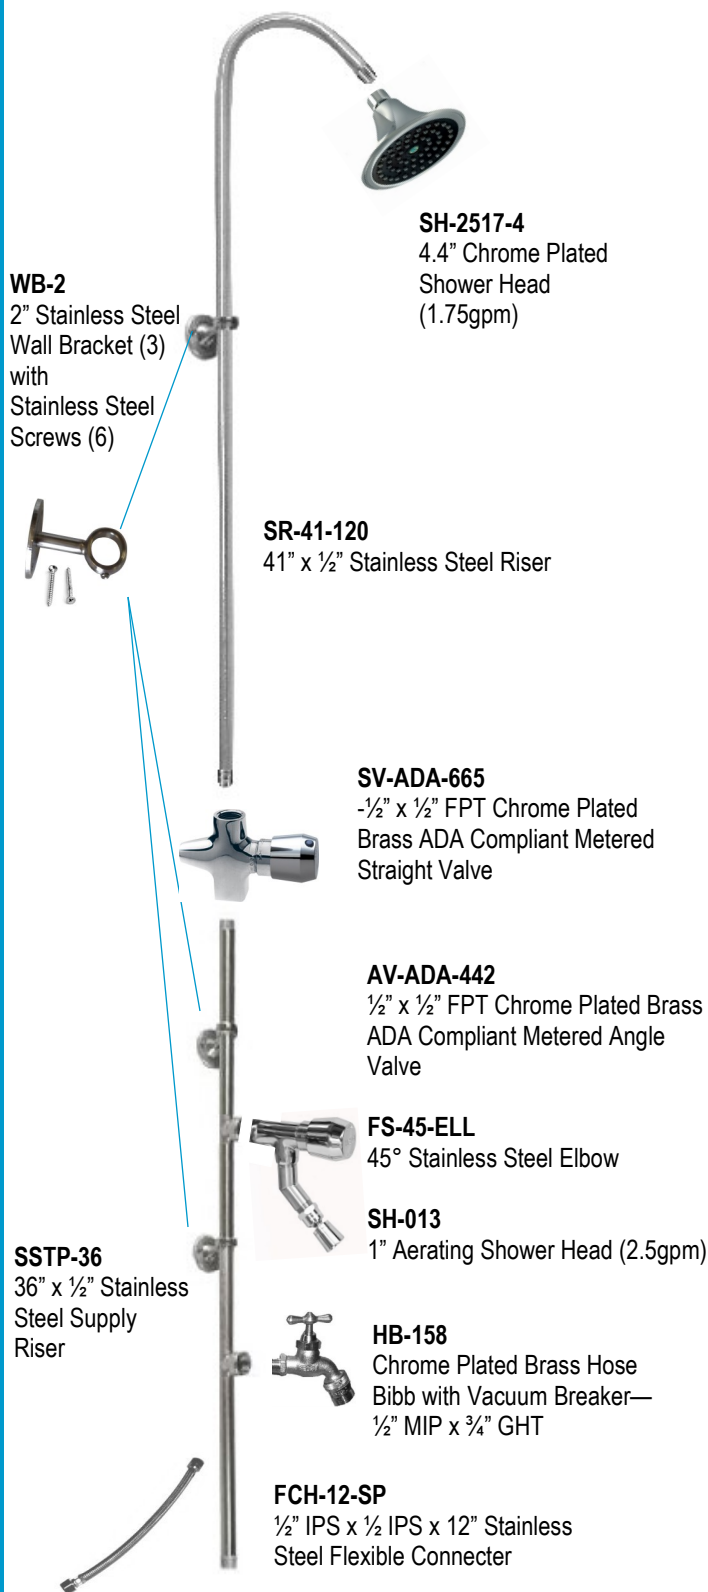

Installation

You will need:

- 1/4" drill bit
- crescent wrench
- 9/16" wrench
- Level

1. Bring 1/2" water supply out of the wall near flooring surface at desired location leaving about 1" of exposed pipe.
2. Attach both shower risers to straight valve using Teflon tape. (**Note: The valve is marked with the word "in" or an arrow. Leaking will occur if the valve is not installed correctly.**)
3. Slide wall brackets onto riser and lower body and tighten set screws.
4. Hold assembled items against the wall. Using a level or plumb line, mark placement of holes for mounting brackets. Adjust brackets as needed. (Suggested shower head height from flooring surface: 78"-80")
5. Pre-drill previously marked holes for placement of mounting brackets and secure shower to wall using provided screws.
6. **PM-500 & PM-750:** Hose Bibb: attach Vacuum Breaker to Hose Bibb. Tighten screw. Attach Assembly to 1/2" female port using Teflon Tape.
7. **PM-600 & PM-750:** Foot Shower: assemble Angle Valve, stainless steel elbow, and 1" Shower Head, using Teflon Tape where needed. Attach assembly to 1/2" male port using Teflon Tape.
8. Attach Shower Head to Shower Riser.
9. Flush water lines before proceeding.
10. Attach the 12" connector to the bottom riser and water supply.
11. Ensure all connections are properly tightened.

TECHNICAL DATA:

- 304 SCH40 STAINLESS STEEL RISERS
- 304 STAINLESS STEEL BRACKETS & SCREWS
- CHROME PLATED BRASS ADA COMPLIANT METERED VALVES
- CHROME PLATED BRASS HOSE BIBB / VACUUM BREAKER
- 1.75 gpm CHROME PLATED SHOWER HEAD
- 2.5 gpm CHROME PLATED FOOT SHOWER HEAD
- STAINLESS STEEL FLEX HOSE

Accessories may vary due to availability and slight modifications by the manufacturer.

Outdoor Shower Company, LLC

Dallas, Georgia

www.outdoorshowerco.com—1-866-746-9371

Manufacturers of Quality Stainless Steel Showers





WALL MOUNT COLD WATER SHOWER UNITS WATER SUPPLY AT FLOORING SURFACE




ADA COMPLIANT

PM-600-ADA PM-750-ADA PM-500-ADA PM-250-ADA

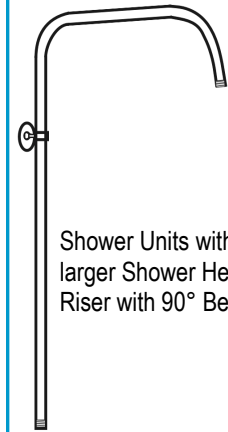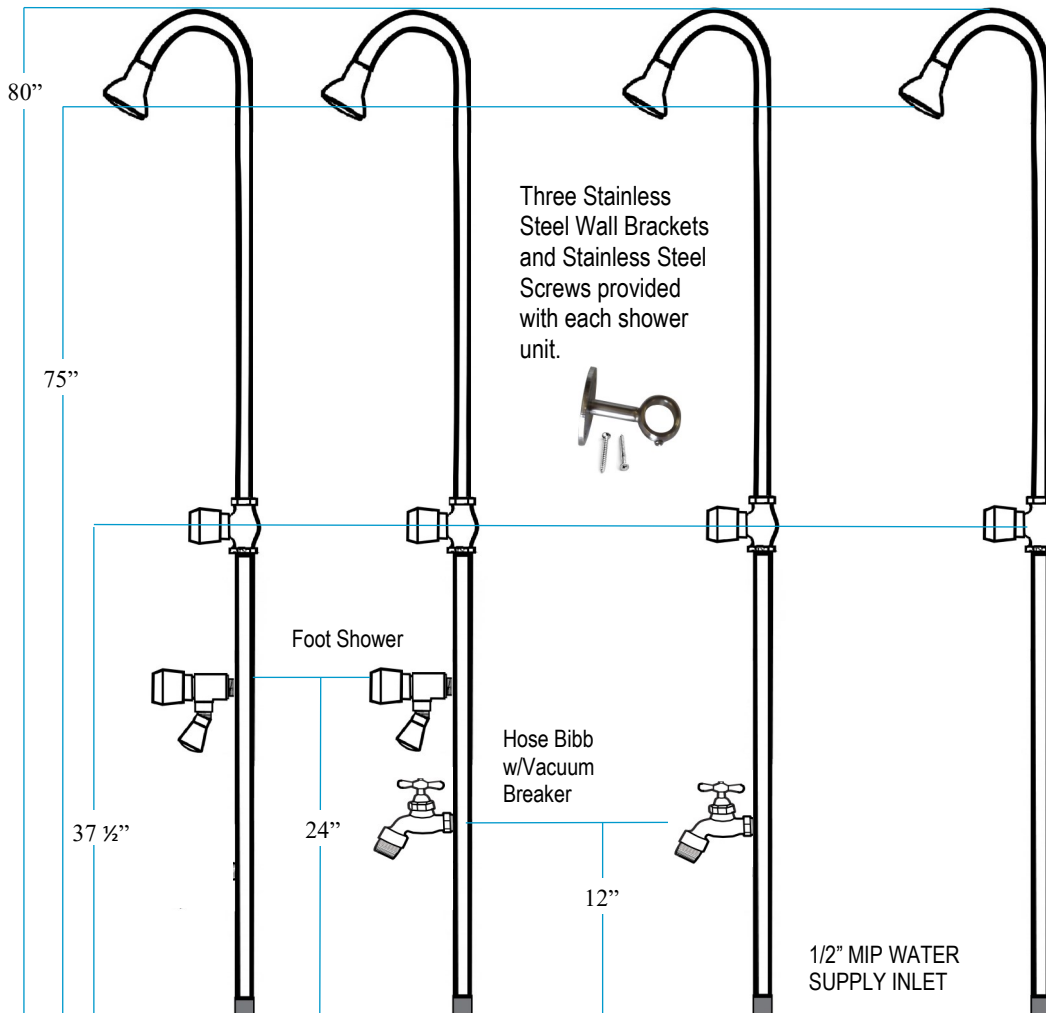

Shower Units with 6" or larger Shower Heads have Riser with 90° Bend.

PM-250-PCV

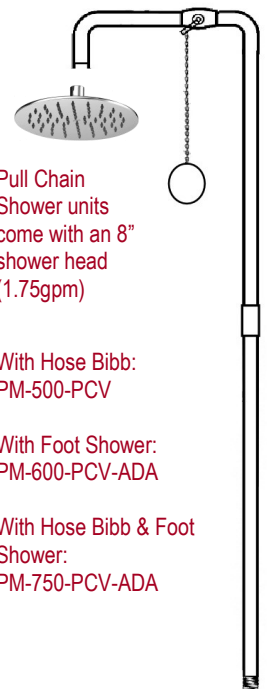

Pull Chain Shower units come with an 8" shower head (1.75gpm)

With Hose Bibb:
PM-500-PCV

With Foot Shower:
PM-600-PCV-ADA

With Hose Bibb & Foot Shower:
PM-750-PCV-ADA

NOTE: Flush supply lines before installing valve to remove chips and dirt which can become lodged in cartridge and cause the faucet to malfunction.

FREEZE DAMAGE IS NOT COVERED BY WARRANTY.

WINTERIZING: It is recommended that a shut-off valve be installed in the water line going to the shower connection where freezing temperatures can occur. Accessories can be removed and other parts partially disassembled for complete protection against freeze damage.

Additional winterizing and maintenance instructions can be found at www.outdoorshowerco.com.

If you have questions regarding the installation of your shower unit or need repair parts contact the Outdoor Shower Company at 1-866-746-9371 or info@outdoorshowerco.com. We'll be glad to assist you.